

## Table of Content OC 5710-400V

|                                       |    |
|---------------------------------------|----|
| <b>1. User manual</b>                 | 2  |
| <b>2. Legal regulations</b>           | 2  |
| <b>3. Safety instructions</b>         | 3  |
| <b>4. Technical information</b>       | 4  |
| <b>5. Functional principle</b>        | 5  |
| <b>6. Technical data</b>              | 6  |
| <b>8. Mounting</b>                    | 7  |
| <b>9. Mounting Principle</b>          | 8  |
| <b>10. Electrical connection</b>      | 9  |
| <b>11. Wiring diagram</b>             | 9  |
| <b>12. Taking into operation</b>      | 11 |
| <b>13. Trouble shooting</b>           | 12 |
| <b>14. Maintenance &amp; Cleaning</b> | 12 |
| <b>15. Transport &amp; Storage</b>    | 12 |
| <b>16. Parts supplied</b>             | 14 |



## 1. User manual

This instruction manual contains information and instructions to enable the user to work safely, correctly and economically on the unit. Understanding and adhering to the manual can help one:

- Avoid any dangers.
- Reduce repair costs and stoppages.
- Extend and improve the reliability and working life of the unit.

**PLEASE ENSURE TO USE THE RIGHT VERSION OF THE INSTRUCTION MANUAL SUITABLE FOR YOUR UNIT.**

### Conditions of use

The unit is to be used exclusively for the dissipation of heat from control cabinets and enclosures in order to protect temperature sensitive components in an industrial environment. To meet the conditions of use, all the information and instructions in the instruction manual must be adhered to.



#### General danger

Indicates compulsory safety regulations which are not covered by a specific pictogram such as one of the following.



#### High electric voltage

Indicates electric shock danger.



#### Important safety instruction

Indicates instructions for safe maintenance and operation of the unit.



#### Attention

Indicates possible burns from hot components.



#### Attention

Indicates possible damage to the unit.



#### Instruction

Indicates possible danger to the environment.

## 2. Legal regulations

### Liability

The information, data and instructions contained in this instruction manual are current at the time of going to press. We reserve the right to make technical changes to the unit in the course of its development. Therefore, no claims can be accepted for previously delivered units based on the information, diagrams or descriptions contained in this manual. No liability can be accepted for damage and production caused by:

- Disregarding the instruction manual
- Operating error
- Inappropriate work on or with the unit
- The use of non-specified spare parts and accessories
- Unauthorised modifications or changes to the unit by the user or his personnel

The supplier is only liable for errors and omissions as outlined in the guarantee conditions contained in the main contractual agreement. Claims for damages on any grounds are excluded.

### 3. Safety instructions

Upon delivery the unit is already meeting current technical standards therefore it can be safely taken into operation. Only trained specialists are allowed to work on the unit. Unauthorised personnel must be prohibited from working on the unit. Operating personnel must inform their superiors immediately if any malfunction of the unit becomes apparent.

Please note that before starting to work on or with the unit, a procedure must be carried out inside the cabinet on which the unit is to be mounted.

Before commencing work inside the cabinet, the control cabinet manufacturer's instruction must be read with regards to:

- Safety instructions.
- Instructions on taking the cabinet out of operation.
- Instructions on the prevention of unauthorised cabinet reconnection.

The electric equipment meets the valid safety regulations. One can find dangerous voltages (above 50 V AC or above 100 V DC)

- Behind the control cabinet doors.
- On the power supply in the unit housing.

The unit has to be fused according to the type plate and the wiring diagram, and must be protected externally from overloading and electrical faults via suitable protective devices such as ground fault protection breakers.



#### **Danger through incorrect work on the unit**

The unit can only be installed and maintained by technical competent and qualified personnel, using only supplied material according to the supplied instructions.



#### **Danger from electrical voltage**

Only specialised personnel are allowed to maintain and clean the unit. The personnel must ensure that for the duration of the maintenance and cleaning, the unit is disconnected from the electrical supply.



#### **Attention**

Damage to the unit through the use of inappropriate cleaning materials. Please do not use aggressive cleaning material.



#### **Instruction**

Damage to the environment through unauthorised disposal. All spare parts and associated material must be disposed according to the environmental laws.

## 4. Technical information

The cooling unit is intended to be used as a complementary accessory to larger industrial equipment. The unit is used where heat needs to be dissipated from electrical control cabinets or similar enclosures in order to protect heat sensitive components. It is not intended for household use. The unit has two completely separate air circuits which ensure that the clean cabinet air does not come into contact with the ambient air which may well be dirty or polluted. Control cabinet cooling units can dissipate large quantities of heat from sealed enclosures such as electrical enclosures into the ambient air and at the same time reduce the cabinet internal temperature to below that of the ambient air. The unit can function without problems in extreme ambient conditions (e.g. dusty and oily air) with a standard operating temperature ranging between -20°C and +55°C. Units can be ordered with an additional electrical cabinet heater. For the cooling capacities and environmental ratings please refer to the type plate data.

### **Controller**

*The unit is equipped with a temperature controller which regulates the function of the air-conditioning cycle. At normal working conditions the display shows the temperature inside the enclosure. The cooling set point for the interior of the enclosure (parameter St / St1) is pre-set at 35°C and can be adjusted between +20°C and +50°C. For units equipped with an internal heater the heating set point (parameter St2) is pre-set at 5°C and can be adjusted between -20°C and +19°C.*

*To change the cooling set point St/St1:*

- 1. Press 'Set' till St/St1 appears on the display.*
- 2. Press the Up/Down buttons to adjust the temperature setting.*
- 3. Press 'Set' to save the new setting.*

*To change the heating set point St2 (Units with internal heater only):*

- 1. Press 'Set' till St1 appears on the display and release the button.*
- 2. Press again 'Set' till St2 appears on the display.*
- 3. Press the Up/Down buttons to adjust the temperature.*
- 4. Press set to save the new setting.*


**Important Note:** *when changing settings ensure that:  $(St2 + 5K) < St1$*

The unit also has a potential free high temperature alarm relay (normally closed configuration) that is pre-set to switch when the enclosure temperature exceeds 55°C. If necessary the alarm relay configuration and the set point can be changed via the controller's parameters. Kindly contact your nearest service / sales partner for further details on how to change these parameters.

## 5. Functional principle

The unit functions on the principle of the compression refrigerator. The main components are: refrigerant compressor, condenser, choke and evaporator. these four components of the refrigerant plant are connected with each other by pipes to form a hermetically sealed system in which the refrigerant (R134a) circulates. R134a is chlorine free and has an Ozone Destruction Potential [ODP] of 0 and a Global Warning Potential [GWP] of 1430.

- |                             |                             |
|-----------------------------|-----------------------------|
| 1. Air intake, cabinet side | 7. Radial fan, ambient side |
| 2. Radial fan, cabinet side | 8. Condenser                |
| 3. Evaporator               | 9. Air outlet, ambient side |
| 4. Air outlet, cabinet side | 10. Filter dryer            |
| 5. Compressor               | 11. Capillary pipe          |
| 6. Air intake, ambient side |                             |

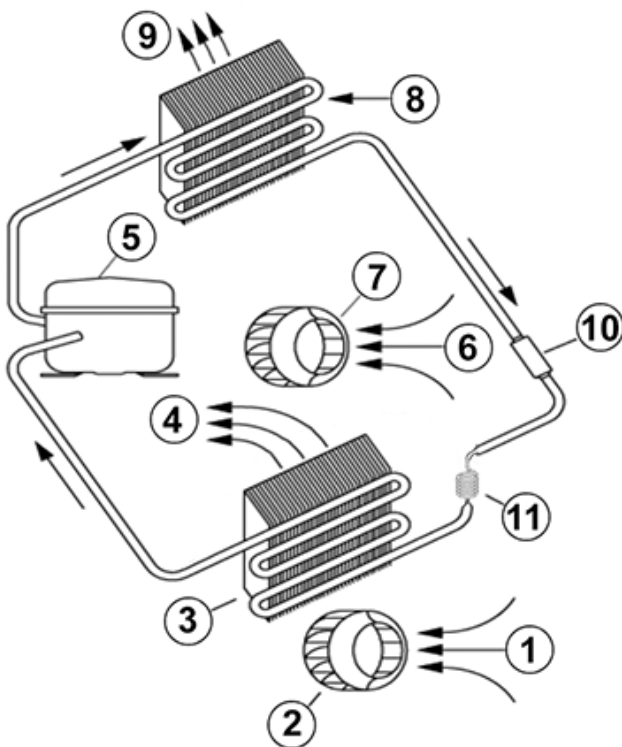

## 6. Technical data

|                                |                                                                                                  |
|--------------------------------|--------------------------------------------------------------------------------------------------|
| <b>Order Number</b>            | 571020001                                                                                        |
| <b>Cooling capacity L35L35</b> | 1.00 kW @ 50 Hz<br>1.08 kW @ 60 Hz                                                               |
| <b>Cooling capacity L35L50</b> | 660 W @ 50 Hz<br>720 W @ 60 Hz                                                                   |
| <b>Compressor</b>              | Reciprocating compressor                                                                         |
| <b>Refrigerant / GWP</b>       | R134a / 1430                                                                                     |
| <b>Refrigerant charge</b>      | 210 g / 7.4 oz                                                                                   |
| <b>High / low pressure</b>     | 30.5 / 6 bar<br>445 / 88 psig                                                                    |
| <b>Temperature range</b>       | -20°C - +55°C                                                                                    |
| <b>Air volume flow</b>         | Ambient air circuit: 320 m³/h<br>Cabinet air circuit: 375 m³/h                                   |
| <b>Mounting</b>                | External                                                                                         |
| <b>Housing Material</b>        | Mild steel, powder coated                                                                        |
| <b>Dimension HxWxD</b>         | 900 x 304 x 270 mm                                                                               |
| <b>Weight</b>                  | 39.5 kg                                                                                          |
| <b>Voltage / Frequency</b>     | 400/460 V - 50/60 Hz 2~                                                                          |
| <b>Current L35L35</b>          | 2.3 A @ 400 V / 50 Hz<br>2.0 A @ 460 V / 50 Hz<br>2.4 A @ 400 V / 60 Hz<br>2.1 A @ 460 V / 60 Hz |
| <b>Starting current</b>        | 9.2 A @ 400 V<br>8 A @ 460 V                                                                     |
| <b>Max. current</b>            | 2.9 A @ 400 V<br>2.7 A @ 460 V                                                                   |
| <b>Nominal power L35L35</b>    | 770 W @ 50 Hz<br>830 W @ 60 Hz                                                                   |
| <b>Max. power</b>              | 1155 W                                                                                           |
| <b>Fuse</b>                    | 5 A (T)                                                                                          |
| <b>Connection</b>              | Connection terminal block                                                                        |
| <b>IP class EN 60529</b>       | IP 56 (TYPE 12, 3, 3R, 4)                                                                        |
| <b>Approvals</b>               | CE, cURus, RoHS                                                                                  |

## 8. Mounting




*Always disconnect the power supply before opening the unit.*

Heat load to be dissipated from enclosure should not exceed specific cooling output of the unit at any condition. At cooling unit selection always cater for a safety margin of at least 15% extra cooling output in the worst conditions. Air inlets and outlets must be completely free from obstruction. Ensure that flows of air leaving and entering the cooling unit, internal and external, are not obstructed. Cooling unit enclosure air suction hole must be installed in the highest possible point. When installing the unit on a door ensure it can take the weight.

Before drilling the enclosure ensure the fixing elements and couplings will not interfere with the equipment inside the enclosure itself. Disconnect power before starting any work inside the enclosure. Following this 1:1 Scale Drilling Template drill the holes and make the required cuts on the enclosure. This template may have been affected by storage conditions, please check this template by verifying values of the largest dimensions before drilling. Fit the sealing strip on the cooling unit on the side connected to the enclosure and follow the installation diagram.

## 9. Mounting Principle

- 1 M6 bolts
- 2 M6 toothed washers
- 3 M6 Flat washers
- 4 Enclosure
- 5 Mounting gasket
- 6 Cooling unit

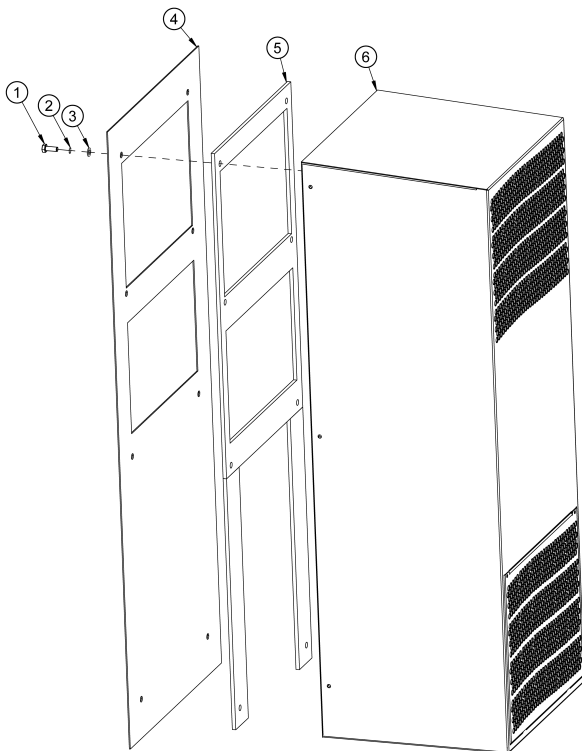




## 10. Electrical connection

### Door Switch

The unit can be switched on and of via a door contact switch. When delivered the door contact terminals are bridged on the female connector. To connect the door contact switch remove the bridge and connect door contact switch. The contact must be closed when the cabinet door is closed.

## 11. Wiring diagram

|        |                                                                |
|--------|----------------------------------------------------------------|
| Mc     | Compressor                                                     |
| Ma     | Ambient fan                                                    |
| Mi     | Internal fan                                                   |
| Cc     | Compressor capacitor                                           |
| Ca     | Ambient fan capacitor                                          |
| Ci     | Internal fan capacitor                                         |
| TS     | Temperature sensor                                             |
| CE     | Condensate Evaporator                                          |
| CH     | Compressor heater                                              |
| C      | Controller                                                     |
| X4     | Electrical Supply Connections                                  |
|        | 230V 1: L1 230V, 3:N                                           |
|        | 120V 1: L1 120V, 3:N                                           |
|        | 460V 1: L1 460V, 3:L2 460V                                     |
|        | 400V 2: LX 400V, 3:L2 400V                                     |
| 4      | PE Earth                                                       |
| 6,7    | P1 / P2 Alarm contacts                                         |
| 8,9    | T1 / T2 Door contacts                                          |
| Notes: |                                                                |
| #1     | Ci used only in OC 5710/ 15/ 20                                |
| #2     | Mi1 used only in OC 5705/ 08/ 09                               |
| #3     | X1 used for 230V units<br>X2 used for 120/ 400 - 460V 2~ units |
| #4     | Ma1 + Ca1 for OC 5741 only                                     |

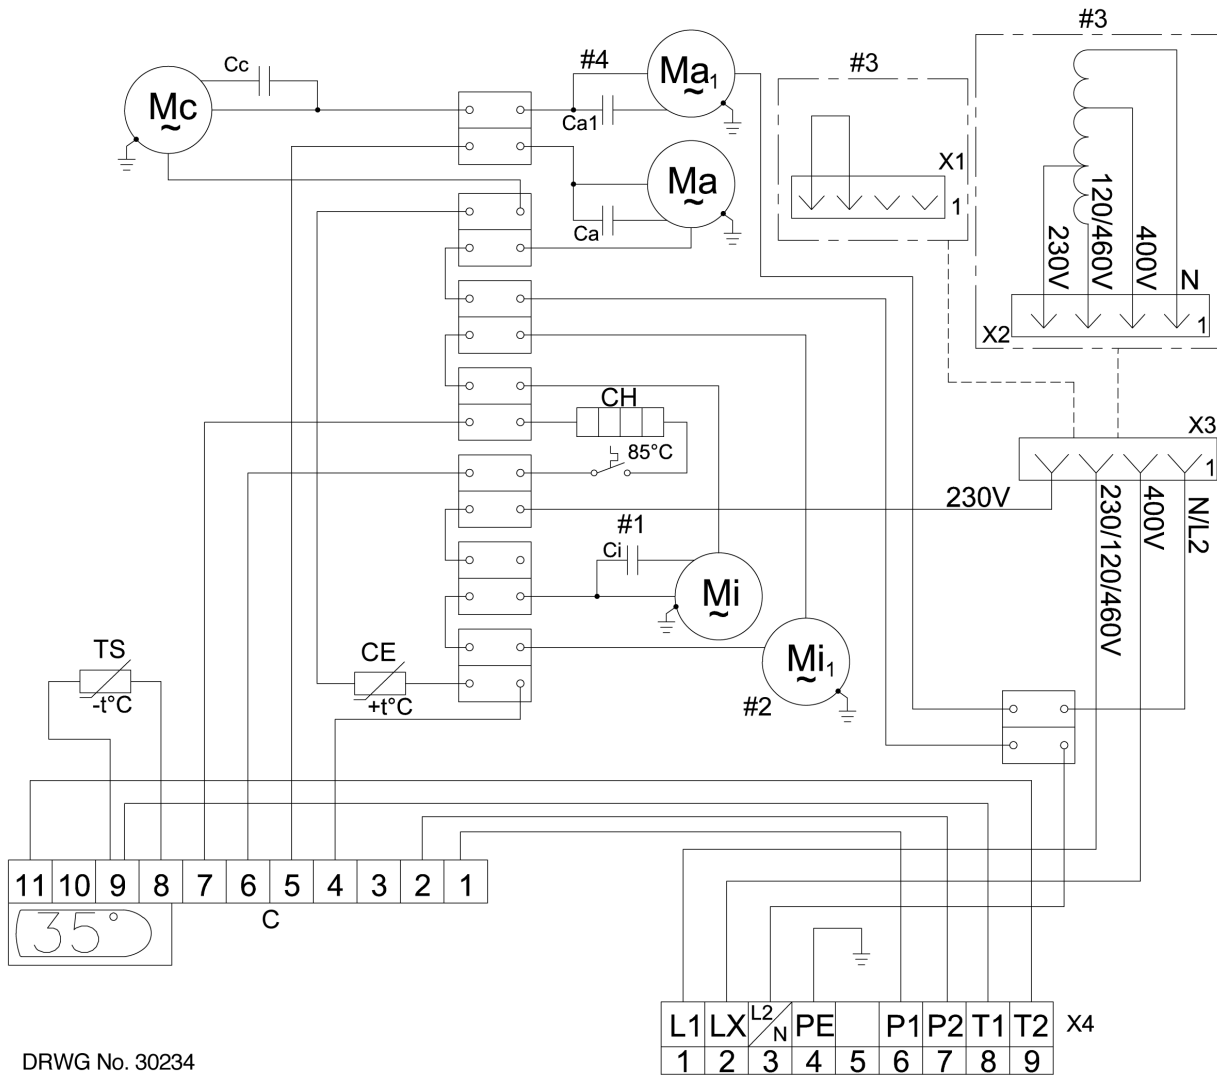

## 12. Taking into operation

### **Attention!**

The unit can be damaged by lack of lubricant. To ensure that the compressor is adequately lubricated the oil, which has been displaced during transport, must be allowed to flow back into it. The unit must therefore be allowed to stand for at least 30 min. before being connected to the mains and taken into operation. Upon connection the internal fan will start working. If the temperature inside the enclosure is higher than the set value of the controller both the compressor and external air fan start working. Once the air inside the enclosure reaches the set temperature the compressor and external fan will stop.

The unit is pre-set at 35°C, which is suitable for most of the electronic devices.

## 13. Trouble shooting

| Failure                       | Condition                                                                                                 | Cause                                                                     | Solution                                                              |
|-------------------------------|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|-----------------------------------------------------------------------|
| Unit doesn't cool             | Internal fan does not work                                                                                | Power not connected.                                                      | Verify power supply                                                   |
|                               | Internal fan works, external fan and compressor don't work                                                | Enclosure temperature is below setting temperature (St)                   | Verify values of parameter "St"                                       |
|                               |                                                                                                           | Door switch contact is open                                               | Verify door switch                                                    |
|                               | Internal fan works, external fan and compressor don't work. Display shows alternating OFF and temperature | Controller doesn't work                                                   | Replace controller                                                    |
|                               |                                                                                                           | The sequence of the phases inside the power supply connector is incorrect | Change phases inside power supply connector                           |
| Unit doesn't cool             | External and internal fan work, compressor does not work                                                  | Compressor motor electrical failure                                       | Have compressor replaced by qualified service technician              |
|                               |                                                                                                           | Capacitor for compressor failed                                           | Replace capacitor                                                     |
|                               | Compressor works, external fan doesn't work                                                               | External fan needs to be replaced                                         | Replace external fan                                                  |
| Enclosure temperature too hot | Compressor and fans (external and internal) work all the time                                             | Cooling unit undersized                                                   | Enclosure needs a cooling unit with higher capacity                   |
|                               | Compressor and external fan work in alternating mode (ON / OFF)                                           | Thermal compressor protector triggered                                    | Verify if ambient temperature is too high, clean condenser            |
|                               |                                                                                                           | Refrigerant leakage                                                       | Contact dealer/service center                                         |
| Excessive condensate          | Enclosure door open                                                                                       | Ambient air gets into the enclosure                                       | Ensure door is closed, add a door switch and connect it to controller |
|                               | Enclosure door closed                                                                                     | Enclosure IP protection class is below IP54                               | Seal all openings of the enclosure                                    |
|                               |                                                                                                           | Damaged or misplaced sealing strip                                        | Repair sealing strip accordingly                                      |

## 14. Maintenance & Cleaning



*Always switch power supply off before starting any maintenance on the unit.*

The cooling unit is generally maintenance free and can be operated without filters in most environments. For units with filters these should be checked, cleaned and if necessary replaced on a regular basis. In addition the unit should have regular functional tests (approx. every 2,000 hours depending on the grade of ambient pollution).

### Disposal.

The cooling unit contains R134a refrigerant and small quantities of lubricating oil. Replacement, repairs and final disposal must be done according to the regulations of each country for these substances.

## 15. Transport & Storage

### Malfunction due to transport damage

On delivery the carton box containing the unit must be examined for signs of transport damage. Any transport damage to the carton box could indicate that the unit itself has been damaged in transit which in the worst case could mean that the unit will not function.

The unit can only be stored in locations which meet the following conditions:

- temperature range: - 40°C to + 70°C
- Relative humidity (at 25°C): max. 95 %

### **Returning the unit**

To avoid transport damage the unit should be returned in the original packing or in a packing case and must be strapped to a pallet. If the unit cannot be returned in the original packing please ensure that:

- A space of at least 30 mm. must be maintained at all points between the unit and the external packing.
- The unit must be shipped in the same position as it was mounted.
- The unit must be protected by shock resistant padding (hard foam corner pieces, strips or cardboard corner pieces).

## 16. Parts supplied

- 1 x Cooling unit with individual packaging
- 1 x Plastic bag containing:
  - Instruction manual with technical information
  - CE Conformity Declaration
  - Drilling template in 1:1 scale, including general information about the unit
- 1 x Installation pack containing:
  - 8 x M6 Bolts
  - 8 x A6.4 Toothed Washers
  - 8 x A6.4 Washers
- 1 x Female connector with shorted wired positions for door contact

| <b>Seifert Systems GmbH</b> | <b>Seifert Systems Ltd.</b> | <b>Seifert Systems AG</b>  | <b>Seifert Systems Inc.</b> | <b>Seifert Systems Pty Ltd.</b> |
|-----------------------------|-----------------------------|----------------------------|-----------------------------|---------------------------------|
| Haßlinghauser Str. 156      | HF09/10                     | Wilerstrasse 16            | 75 Circuit Drive            | 105 Lewis Road                  |
|                             | Hal-Far Industrial Estate   |                            | North Kingstown             | Wantirna South                  |
| 58285 Gevelsberg            | Birzebbuga, BBG 3000        | 4563 Gerlafingen           | RI 0285                     | 3152 Victoria                   |
| Germany                     | Malta                       | Switzerland                | USA                         | Australia                       |
| Tel. +49 (0) 2332 55124-0   | Tel. +356 2220 7000         | Tel. +41 (0) 32 675 35 51  | Tel. +1 401-294-6960        | Tel. +61 (3) 98 01 19 06        |
| Fax +49 (0) 2332 5512429    | Fax +356 2165 2009          | Fax +41 (0) 32 675 44 76   | Fax +1 401-294-6963         | Fax. +61 (3) 98 87 08 45        |
| info.de@seifertsystems.com  | info@seifertsystems.com     | info.ch@seifertsystems.com | info.us@seifertsystems.com  | info@seifertsystems.com.au      |